
iCE-Entry -R- 10 STEPS FOR QUICK SETUP

- 1.) Connect power cable to iCE-Entry-R device (see the Picture).
- (2.) Connect electric lock cables (see the Picture 1) or magnetic lock cables (see the Picture 2) to iCE-Entry-R device.
- 3. Insert Micro SIM card into your mobile phone, check if the SIM card is protected with PIN code and **disable the PIN** code. SIM card must be activated on the GSM network.
- 4. Insert Micro SIM card into the SIM holder: gold contacts down and cut off corner RHS (see the Picture).
- 5. Plug the ICE-Entry-R device into source power supply voltage.
- 6. Wait until YELLOW LED (LED3) start flashing in 5 second interval (0,5 sec ON / 5 sec OFF) and upper GREEN LED (LED1) starts flashing (Signal strength: 1 flash = low signal level / 5 flashes = excellent signal level).


 During registering onto the GSM network you hear 1 beep / 10 sec. When the device is successfully registered on the GSM network you hear 3 short confirmation beeps. This is set in around 30 seconds.
- **7.** Send text message (SMS) ;+ATN1=PhoneNumber; (using your own mobile phone number). You should receive text message (SMS) back to confirm the setting.
- 8. iCE-Entry-R device is now ready to operate.
- **9. PRESS CALL BUTTON:** The device initiates the call: you hear beeps to starts dialing and then a ringtone.
- **10. OPEN THE DOORS:** When you are talking to the visitors: press **11** on your mobile phone keypad to open the doors connected to Output Relay 1 or press 21 to open the doors connected to Output Relay 2.

WIRING

Wiring is minimal. Apart from 14,7V – 24V power supply to iCE-Entry-R device & door release wires, there is no other required wiring.

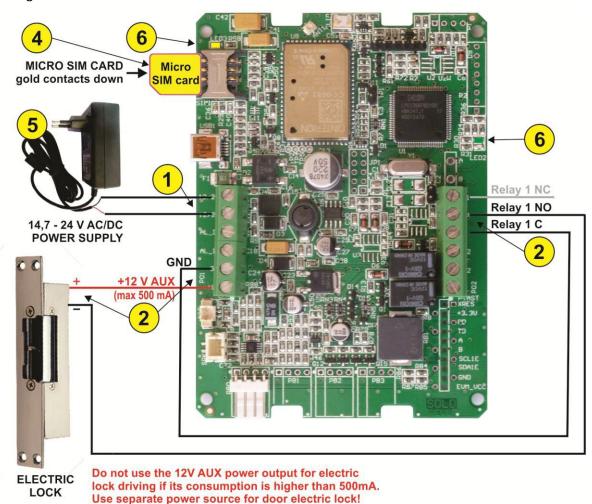

Picture 1: Connection diagram – electric lock

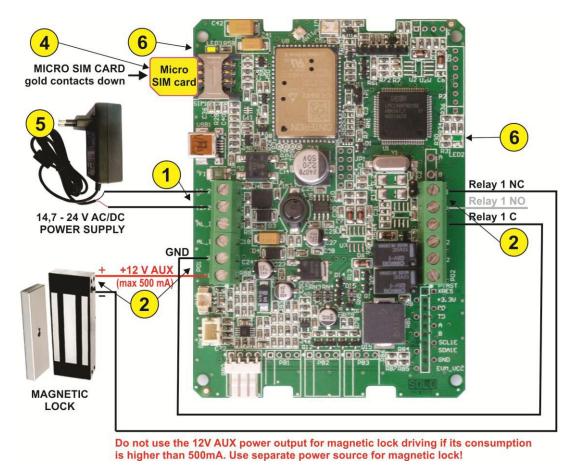

Picture 2: Connection diagram – magnetic lock

NOTE:

See the "Quick Start Guide" and the complete "Installation Manual" for full information. This is a basic "iCE-Entry-R—10 STEPS FOR QUICK SETUP" only.

Please contact your Supplier for further information.