



# 8833CT-O/C/S & 733T

## 8833CT-O/C/S

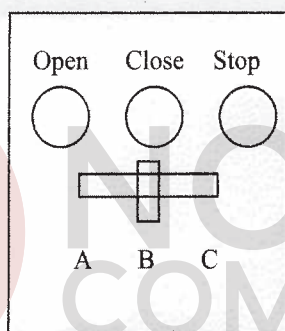

## 733T

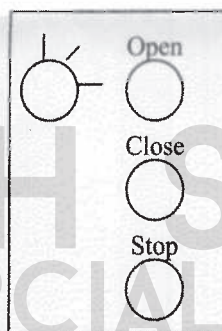

### Open, Close & Stop Transmitter to Control 3 Doors.

Match dipswitches 1, 2, 3, 4, 5, 7 & 8 on both transmitter and receiver. Set the 6th dipswitch in open/close/stop receivers accordingly.

Receiver	Slide Switch	6th Dipswitch Receiver
Door 1	A	“+”
Door 2	B	“O”
Door 3	C	“—”

*“Changes or modifications not expressively approved by the party responsible for compliance could void the user’s authority to operate the equipment”*