


# 8833T

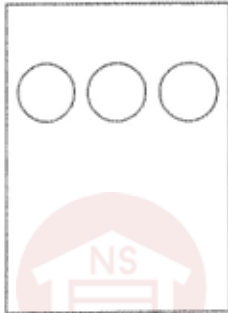

**Three Button Transmitter:** Match dipswitches 1 thru 8 on both transmitter and receiver. Set the 9th dipswitch in individual receivers accordingly.

Receiver	Transmitter	9th Dipswitch Receiver
Door 1	Left Button	“+”
Door 2	Middle Button	“O”
Door 3	Right Button	“_”

*“Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment”*