


8866CT-O/C/S

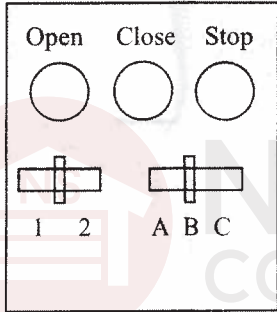

Open, Close & Stop transmitter to control 6 Doors. Match dipswitches 1, 2, 3, 4, 5 & 8 on both transmitter and receiver. Set the 6th and 7th dip-switch in the open/close/stop receivers accordingly.

| Receiver | Slide Switch 1, 2 | Slide Switch ABC | 6th Dipswitch on Receiver | 7th Dipswitch on Receiver |
|----------|----------------------|---------------------|------------------------------|------------------------------|
| Door 1 | 1 | A | "+" | "+" |
| Door 2 | 1 | B | "O" | "+" |
| Door 3 | 1 | C | "_" | "+" |
| Door 4 | 2 | A | "+" | "O" |
| Door 5 | 2 | B | "O" | "O" |
| Door 6 | 2 | C | "_" | "O" |