

**Installation Instructions for Rear Dock Leveler Foam Seal Kit – DLF10-01-W**

1. To install simply cut the foam and steel rod to dock leveler width (if necessary).
2. Spray a lubricant liberally into the center hole of the foam seal. Insert the steel rod into the foam. Make sure to guide the rod all the way through the other end of the foam seal.
3. Adjust the dock leveler in such a way as to create the widest opening between the rear plates for inserting the seal.
4. Push the foam seal and rod into the rear dock opening with a blunt tool so damage to the foam is avoided.
5. On wider rear dock openings, a second layer of the foam (without steel rod) can be inserted on top of the first to greatly improve the function of the seal. On more narrow openings the foam can be used without the steel rod but some sagging of the foam between the hinge points may occur over time.



**PHONE: 800-783-6112**

**FAX: 440-365-3514**