

## RF Keypad Transmitter

The RF Keypad is used with any gate or garage door opener that consists our P294-K receiver or compatible receiver. The RF keypad will transmits once after you enter correct Code. The keypad will not affect the autoclose setting of your gate opener.

The keypad will shut down for approx. 40 seconds if your entry code is not correct within a string of 18 digits. This will discourage an unauthorized person from trying to use random numbers to access your property.

**Safety Note :** Never install the RF keypad where a person can touch the gate while activating the keypad.

## Programming the Keypad

Program Transmitter Dip Switch setting into the R.F. Keypad

1. Open the Transmitter to find out the dip switches setting.  
Each of the 9 dip switches has 3 setting (+, o, -)
2. Setting the dip switches to match with the receiver

## Connect as hardwired keypad

1. Disconnect the RF transmitter by moving the jumper (Tx time) to J0 where in left hand side by the dip switches.
2. Connect the accessories (e.g. electronics door lock & 12V power supply) to terminal blocks.

## RF transmit time setting

1. Moving the jumper (Tx time) to  
J0 for no transmit  
J1 for transmit less then one second  
J2 for transmit two second  
J3 for transmit three second  
J4 for transmit four second

## Multi-colour status LED

- Orange -- key depress
- Red -- enter correct code & transmitting
- Green -- Programming mode
- Green (flash 3 times) -- Error during Programming mode
- Red (flashing slowly) -- low battery

## Replace the batteries

When the RED light blink slowly and brightly.

## Return to default setting

1. Disconnect the power by remove one of the batteries.
2. Depress " 3 ", " 6 ", " 9 " keys simultaneously.
3. Power up the Keypad again. (Replace the battery).
- 4 Release " 3 ", " 6 ", " 9 " keys.

## Programming the Master Code



1. Enter the " Master Code " (default is 1234).
2. Press the Programming button.
3. Enter " 1 " for Change code.
4. Enter " 00 " for Master code.
5. Enter the new " Master Code " (4 digits).
6. Press the Programming button.

## Programming the User Entry Code (up to 60 different User Entry Code)

1. Enter the " Master Code " (default is 1234).
2. Press the Programming button.
3. Enter " 1 " for Change code.
4. Enter " 01 " for the Number of User code.  
(e.g." 03 " for Third User Entry Code ... etc.).
5. Enter the new " User Entry Code " (4 digits).
6. Press the Programming button.

## Delete the programmed User Entry Code

1. Enter the " Master Code " (default is 1234).
2. Press the Programming button.
3. Enter " 2 " for Delete a User code.
4. Enter " 01 " for the Number of User code.  
(e.g." 03 " for Third User Entry Code ... etc.).
5. Press the Programming button.

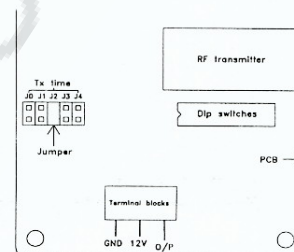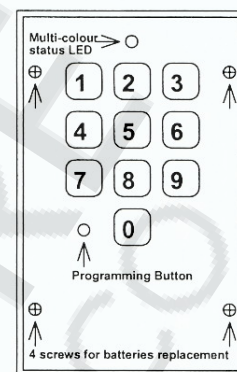

OMP3301KA1A

