

## Heddolf/Keystone RF Keypad Transmitter

The RF Keypad can be used with any gate or garage door opener that use's our M294-K or Multi-Code receiver inside the opener. The keypad will transmit once after you enter the correct numeric code. The keypad will NOT affect the auto close setting of your gate opener.

The keypad will shut down for approx. 40 seconds if your entry code is not correct within 4 tries.

**Safety Note: NEVER install the keypad where a person can touch the gate while activating the keypad.**

### To program the Keypad:

1. Install 4 AA batteries behind the faceplate. OR if hardwiring see separate instructions below.
2. Open the keypad to change the dipswitch: You will see 10 dipswitches, each has a 2 position setting—ON or OFF (**Figure D**) Set the dipswitches to match that of your receiver. I.e., garage door/gate opener.
3. Program the User Code—you can have up to 60 different user codes.
  1. Enter MASTER code 1234 (default)
  2. Press the programming button (**Figure C**)
  3. Enter 1 to change the code
  4. Enter 01 to enter your first code, and then assign a four-digit code.
  5. Press the programming button again. You are now complete with the first code. If you wish to install more codes simply press programming button again enter 02 the another four digit code, etc.
4. Deleting a programmed user code:
  1. Enter the Master Code (default is 1234); if you wish to change this default see further instructions.
  2. Press the programming button (**Figure C**)
  3. Enter 2
  4. Enter the number of the user code you want deleted. I.e., 03 for third user code or 50 for fiftieth user code
  5. Press the programming button again.

### HARDWIRING the Keypad:

1. Disconnect the RF transmitter by moving the jumper (TX Time) to J0. (**Figure A**)
2. Connect the accessories (e.g. electronics door lock & 12V power supply) to terminal blocks. (**Figure B**)
3. Adjusting RF Transmit—**May be necessary for some openers**  
Moving the jumper (TX Time) to
  - a. J0 to transmit 0 second
  - b. J1 to transmit 1 second
  - c. J2 to transmit 2 second
  - d. J3 to transmit 3 second
  - e. J4 to transmit 4 second

### Multi Color Status LED

1. Orange—lights when you press the keys
2. Red—entered the correct code and transmitting
3. Red—IF blinking slowly and lightly batteries are low and need to be replaced.
4. Green—you are in programming mode
5. Green flashing 3 times—Error during programming

### Return to DEFAULT SETTINGS:

1. Disconnect all batteries—taking all power away
2. Depress 3,6,9 at the same time AND put the power back to the keypad.
3. When you release the keys you will be back to factory setting with no programmed codes.

### Changing the Master Code:

1. Enter default code 1234
2. Press the programming button (**Figure C**)
3. Enter 1
4. Enter 00
5. Enter your new 4 digit code
6. Press the programming button (**Figure C**)

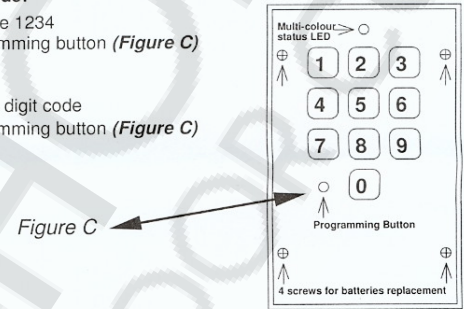


Figure C

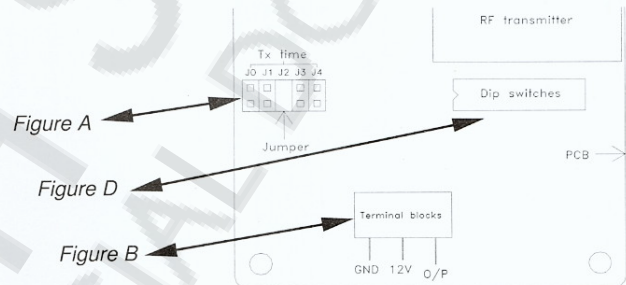


Figure A

Figure D

Figure B

OMM3301KA2

