


## INSTRUCTIONS FOR MINI TRANSMITTER

**IF YOU WILL BE USING A MINI TRANSMITTER (Figure A),** the Mini Transmitter will operate the same as the Single Entry Transmitter. **Important :** set the code on your Mini Transmitter to match your existing transmitter(s) exactly or it will not function.

### 1. Remove the Transmitter Cover

Remove the screw from the back of the Mini Transmitter with a small Philips screwdriver. Lay the transmitter down with the button facing up. Unsnap the top of the transmitter to access the coding switches.

Figure A

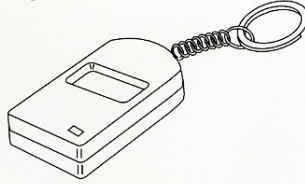

### 2. Set the Coding Switches

There are nine (9) dip switches, each of which can be placed in two different positions (+, 0, -). Set the switches in the Mini Transmitter to exactly match your existing transmitter(s). **DO NOT** set all switches in the same position, such as all +, all -, or all zeros (Figure B). **WARNING:** No other adjustments should be made inside the transmitter.

Figure B



Replace the Transmitter cover and tighten the Philips screw.

**NOTE:** If the red light on the transmitter is dim or flickers when the transmitter button is pushed, the transmitter battery may be weak.

Replace when necessary with 12 Volt Battery.

OM02191K1

