


# Manual of RX-L 315-390MHz

## 1. RX-L 315-390 Mhz

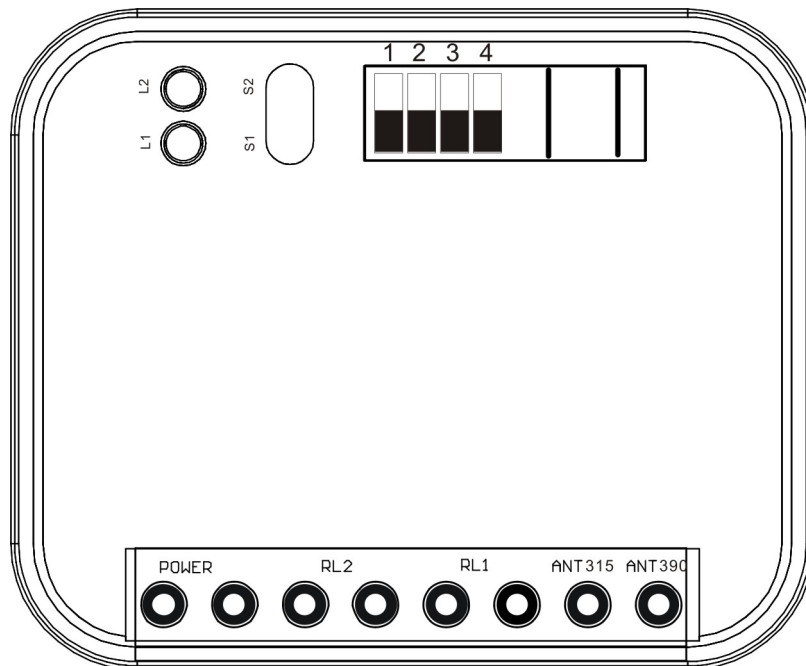

### 2. Brand selector

With 4 dipswitches, user can select up to 16 remote brands. The brands selection is showed in table 1.

### 3. Learn Button and LED

In RX-L 315-390 receiver, there are 2 independent channels. Each channel has independent learn button S1, S2 and L1, L2.

### 4. Power Input Selector

The RX-L 315-390 can be worked at the input AC/DC 12V~30V. However, it's better to change the PIS according to the power input. If the input is great than 24V, shorten pin 2&3; shorten 1&2 if input less than 24V.

### 5. How to entry remote and Erase all remote

#### Entry one button or remote:












1. First, selecting the correct brands for remote will be entry by dipswitch;
2. Press the learn button, the LED turn on. Press the button on the remote; the LED flashes 4 times, this button entry into the remote successfully.
3. Repeat step 2 for another button.
4. 2 channels work same.

#### Erase all data in memory card:

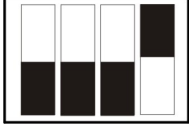Pressing and holding either learn button, the LED start flash. Keep holds pressing this button until the LED turn off. All data in the memory card will be erased permanently.

**Notice: Be carefully for erasing all data in the memory card. The data will be erased permanently and cannot be recovered.**

**Tabla1: Selection table.**

Item	Selection Dip switch	Brand	Freq.	Observation
1	<p>1 2 3 4</p> 	Liftmaster	315.00MHz	
2	<p>1 2 3 4</p> 	Liftmaster Rolling Code	315.00MHz	
3	<p>1 2 3 4</p> 	Liftmaster	315.00MHz	
4	<p>1 2 3 4</p> 	Liftmaster	390.00MHz	
5	<p>1 2 3 4</p> 	Liftmaster Rolling Code	390.00MHz	
6	<p>1 2 3 4</p> 	Liftmaster	390.00MHz	