**Step 1.** Open the access door by sliding it to the right.

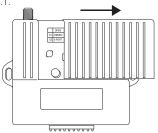


Fig. 1

Step 2. You can now see the jumper and dip switch. See Fig. 2 Note: jumper must be in place for operation.


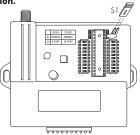


Fig. 2

**Step 3.** The Hive Receiver will automatically detect voltages between 12 - 24 V. either AC or DC.

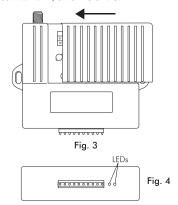


**Step 4.** The Transmitter Solutions Hive receiver with 10 dip switches can operate at 433 MHz.

**Step 5.** Set the dip switches to the desired settings to match your transmitters SW1 controls Relay 1 and SW2 controls Relay 2. Refer to Fig. 2.

**Step 6.** Wire the receiver harness according to the wiring diagram, (See Fig. 5). For ease of installation the wires are color coded. For most standard gate and door installations you will wire the open input of your gate operator or garage door, with the common and NO (normally open) contact of either relay 1, 2 or both. See Fig. 5.



Step 7. Attach the wiring harness to the receiver. See Fig. 6.

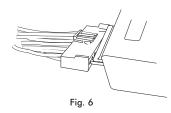

**Step 8.** Verify the receiver has power. This can be verified by observing if LED1 and LED2 are illuminated. See Fig. 4.

**Step 9.** Push a transmitter that is programmed to the same code as the receiver. If you hear the relay click and see the LED flash quickly, you have successfully wired the receiver.

Step 10. Close the access door on the receiver. See Fig 3.

Step 11. Mount the receiver in a safe and convenient location on your installation. Remember to take care to avoid items that may cause interference with the receiver such as electric motors, etc. The receiver can be attached with either the mounting screw holes of the housing or by using industrial strength Velcro.

**Step 12.** Install the coax antenna (provided) by screwing it onto the antenna mount which protrudes from the housing.

(continued on back)

Step 13. After you have completed the installation check for operational range from various areas around the installation. If the range is less than desired, try re-positioning the antenna, receiver, or both and re-test the range.

Congratulations on successfully installing your Transmitter Solutions Hive receiver! If you have any questions, please do not hesitate to call us.

## WARRANTY:

The warranty period of Transmitter Solutions receivers is twenty-four (24) months. This warranty shall begin on the date the receiver is manufactured. During the warranty period, the product will be repaired or replaced (at the sole discretion of Transmitter Solutions) if the product does not operate correctly due to a defective component. This warranty does not extend to (a) the receiver case, which can be damaged by conditions outside the control of Transmitter Solutions, or (b) battery life. This warranty is further limited by the following disclaimer of warranty and liability:


EXCEPT AS SET FORTH ABOVE, TRANSMITTER SOLUTIONS MAKES NO WARRANTIES REGARDING THE GOODS, EXPRESS OR IMPLIED, INCLUDING WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. BUYER MAKES NO RELIANCE ON ANY REPRESENTATION OF TRANSMITTER SOLUTIONS, EXPRESS OR IMPLIED, WITH REGARD TO THE GOODS AND ACCEPTS THEM "AS-IS/WHERE-IS" TRANSMITTER SOLUTIONS SELLS THE GOODS TO BUYER ON CONDITION THAT TRANSMITTER SOLUTIONS WILL HAVE NO LIABILITY OF ANY KIND AS A RESULT OF THE SALE. BUYER AGREES THAT TRANSMITTER SOLUTIONS SHALL HAVE NO LIABILITY FOR DAMAGES OF ANY KIND, WHETHER DIRECT INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING INJURIES TO PERSONS OR PROPERTY, TO BUYER, ITS EMPLOYEES OR AGENTS AS A RESULT OF THE SALE. BUYER ALSO AGREES TO HOLD TRANSMITTER SOLUTIONS HARMLESS FROM ANY CLAIMS BUYER, OR ANY THIRD PARTY, MAY HAVE AS A RESULT OF BUYER'S USE OR DISPOSAL OF THE GOODS. BUYER HAS READ THIS DISCLAIMER AND AGREES WITH ITS TERMS IN CONSIDERATION OF RECEIVING THE GOODS



7380 S Eastern Ave. #124-320 • Las Vegas, NV 8912 (866) 975-0101 • (866) 975-0404 fax sales@transmittersolutions.com

Multicode, Linear and Stanley are registered trademarks owned by Linear Corporation..



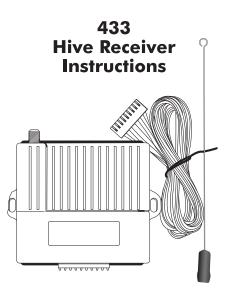

Congratulations on purchasing the most state of the art and simple to use receiver currently available on the market. The receiver has been designed for ease of use and longevity in the field. If you will follow these simple instructions you will have your new receiver installed and running in a very short time.

Revised 12/09