

# Skylink® Four-Button Keychain Transmitter

Model 18T4

## 1. INTRODUCTION


In this package, you will find a four button keychain transmitter with 12V alkaline battery and a mounting bracket.

Four-Button Keychain Transmitter (Battery inside)



## 2. PROGRAM A TRANSMITTER TO THE RECEIVER

You need to do the programming in order to add the transmitter to the receiver.

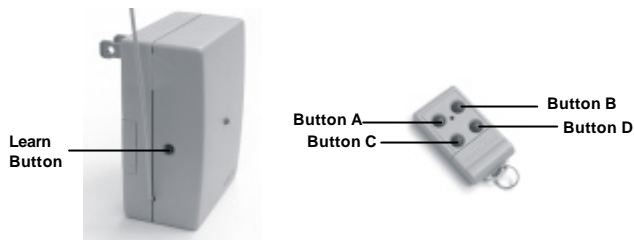

- 1 Plug the receiver SW-18R or 18R (sold separately) into an electrical socket.
- 2 Press and hold the learn button on the left hand side of the receiver. The red LED on the receiver will flash.
- 3 Press the assigned button (either button A or B or C or D) of the transmitter you want to program to the receiver.
- 4 The receiver red LED will go off indicates the programming is completed.
- 5 To program a transmitter to control another receiver, repeat process (1) to (4) but pressing another button (A or B or C or D).

## 3. TROUBLE SHOOTING

Q: Door opener does not react after pressing the button on the transmitter ?

- A: - Ensure when the button on the transmitter is pressed, the red light on the transmitter comes on. Otherwise, check if the battery is inserted properly.
- The appropriate button on the transmitter should be pressed.
  - If the red light on the receiver flashes when you press the button on the transmitter, but the door opener does not respond, please ensure the red/black wire is successfully connected from the receiver to the wall mounted door control.
  - Ensure the wires that are previously connected to the wall mounted door control are not loose.
  - Ensure the transmitter has been programmed to the receiver. Refer to section 2 for how to program a transmitter to the receiver.

## 4. REMOVE TRANSMITTER FROM THE RECEIVER


You can delete the transmitter from a receiver.

- 1 Unplug the receiver from the electrical socket.
- 2 Press and hold the learn button on the left hand side of the receiver when plugging the receiver into an electrical socket, the red LED on the receiver will flash rapidly. All the transmitters and keypads are deleted.

## 5. BATTERY

12 volt alkaline battery (size 23A) (included).

It is time to change the battery when the red LED on the transmitter does not turn on when either button is pressed.

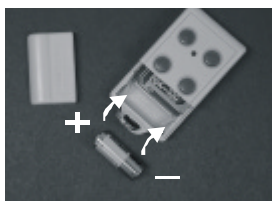

## 6. ADDITIONAL RECEIVER

There are 4 buttons on your transmitter, the other button can be used to control another Skylink® Garage Door Receiver Model 18R (sold separately) or Skylink® Wireless Switch Receiver Model SW-18R (sold separately).



## 7. FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

### WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## 8. WARRANTY

If, within one year from date of purchase, this product should become defective (except battery), due to faulty workmanship or materials, it will be repaired or replaced, without charge. Proof of purchase and a Return Authorization are required.

## 9. CUSTOMER SERVICE

If you would like to order Skylink's products or have difficulty getting them to work, please :

1. visit our FAQ website at [www.skylinkhome.com](http://www.skylinkhome.com), or
2. email us at [support@skylinkhome.com](mailto:support@skylinkhome.com), or
3. call our toll free at 1-800-304-1187 from Monday to Friday, 9 am to 5 pm EST.  
Fax +800 286-1320

## CUSTOMER SERVICE

17 Sheard Avenue, Brampton, Ontario, Canada L6Y 1J3  
Email: [support@skylinkhome.com](mailto:support@skylinkhome.com)  
<http://www.skylinkhome.com>  
P/N. 101A292-001 Rev.1  
©2004 SKYLINK GROUP