

iCe-LCD



INSTALLATION MANUAL

Contents

1	FOR YOUR SAFETY	6
2	INTRODUCTION	7
3	FEATURES AND APPLICATIONS	8
4	START UP	9
5	LED DISPLAY	10
6	CLEAR ALL PROGRAMMED DATA FROM ICE-LCD	11
7	CONNECTING DIAGRAM	12
8	PROGRAMMING ICE-LCD.....	13
9	THE ICE-LCD PARAMETERS.....	14
9.1	ALARM SUPPORT	14
9.2	OUTPUT MANAGEMENT	18
9.3	SECURITY LEVEL - SL.....	20
9.4	PREPAID CARD CREDIT AND VALIDITY INFORMATION	21
9.5	SET-UP PARAMETERS	23
9.6	SMS MESSAGES EDITOR.....	26
9.7	INTERCOM	27
9.8	TRADE BUTTON (OPTION)	28
9.9	DIRECT ACCESS BY ENTERING PIN CODE.....	30
9.10	CALLER ID RECOGNITION (CLIP), CALLER-IN FUNCTION	30
9.11	EVENT LOGING.....	32
9.12	SPECIAL SMS COMMANDS	33
10	PRINT-OUT OF THE PARAMETERS.....	35
10.1	RECEIVE ALL PARAMETERS (PALL)	35
10.2	CHECK SW REVISION (PSW)	35
10.3	CHECK SIGNAL QUALITY (PSQ)	35
10.4	RECEIVE TELEPHONE NUMBERS (PTN).....	35
10.5	RECEIVE LINKS (PLN)	35
10.6	RECEIVE INPUT PARAMETERS (PIN).....	35
10.7	RECEIVE INPUT FILTER VALUE (PID)	36
10.8	RECEIVE OUTPUT FILTER VALUE (POD).....	36
10.9	RECEIVE DELAY BEFORE DIAL VALUE (PDD).....	36
10.10	RECEIVE ACCESS TELEPHONE NUMBERS (PSL)	36
10.11	RECEIVE OUTPUT PARAMETERS (POS)	36
10.12	RECEIVE ALL PROGRAMMED SMS MESSAGES (P#)	36
10.13	RECEIVE SET UP PARAMETERS VALUE (PPA)	36
10.14	RECEIVE CREDIT PARS PARAMETERS (PCREF)	37
10.15	RECEIVE ALL CLIP PARAMETERS (PCLP).....	37
10.16	RECEIVE INTERCOM CALL GROUPS PARAMATERS	37
10.17	RECEIVE TRADE BUTTON PARAMETERS	37
10.18	STATE OF THE CREDIT FOR THE PREPAID CARD	38

10.19	STATE OF THE OUTPUTS (PORC).....	38
10.20	MANUAL GSM MODULE RETARD (MRES)	38
10.21	RECEIVE STATUS OF INPUTS (INS).....	38
10.22	RECEIVE ICE-LCD LOG	38
11	CHANGING PARAMETERS USING THE SMS COMMANDS.....	39
12	DEFAULT SETTINGS ON ICE-LCD	40
13	PARAMETERS PRINT-OUT COMMANDS	42
14	TECHNICAL SPECIFICATIONS.....	43
15	CONTACTS.....	44

Figures

Figure 1: ICE-LCD Connection diagram.....	12
Figure 2: Input Connection diagram.....	14
Figure 3: Output Connection diagram	18

Tables

Table 1: IN, ID and DD parameters.....	15
Table 2: IN, ID, DD parameters example.....	15
Table 3: Remote alarm reporting parameters.....	16
Table 4: Remote alarm reporting example.....	17
Table 5: DTMF control example.....	17
Table 6: Output management parameters.....	19
Table 7: Output management parameters example.....	19
Table 8: SL parameter.....	20
Table 9: SL parameter example.....	20
Table 10: Prepaid card validity parameters.....	22
Table 11: Prepaid card validity parameters example.....	22
Table 12: Set-up parameters.....	25
Table 13: Set-up parameters example.....	25
Table 14: Message parameters.....	26
Table 15: Message parameters example.....	26
Table 16: Intercom parameters.....	27
Table 17: Intercom parameters example.....	28
Table 18: Trade button parameters.....	29
Table 19: Trade button example.....	29
Table 20: Entering PIN code parameters.....	30
Table 21: Entering PIN code example.....	30
Table 22: CLIP parameters.....	31
Table 23: CLIP parameters example.....	32
Table 24: LOG parameters.....	33
Table 25: LOG parameters example.....	33
Table 26: SMS commands.....	34
Table 27: SMS commands example.....	34
Table 28: ICE-LCD default settings.....	41
Table 29: ICE-LCD parameters print out commands.....	42

1 FOR YOUR SAFETY

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.

SWITCH ON SAFELY

Do not switch the unit on when use of wireless phone is prohibited or when it may cause interference or danger.

INTERFERENCE

All wireless phones and units may be susceptible to interference, which could affect performance.

SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the unit off near medical equipment.

SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.

SWITCH OFF WHEN REFUELING

Do not use the unit at a refueling point. Do not use near fuel or chemicals.

SWITCH OFF NEAR BLASTING

Follow any restrictions. Do not use the unit where blasting is in progress.

USE SENSIBLY

Use only in the normal position as explained in the product documentation. Do not touch the antenna unnecessarily.

2 INTRODUCTION

ICE-LCD is a simple GSM intercom communication system for multi apartments, that is designed to ensure low-cost, reliable and single box solution for intercom application. It is designed for unlimited range, wire free GSM intercom and CLIP support.

In addition ICE-LCD supports alarm detection, stay-alive messages, credit detection etc...

3 FEATURES AND APPLICATIONS

Features:

- ⇒ Built-in 4 band GSM module
- ⇒ Keypad call support
- ⇒ Keypad Access entry support (by 4 digit PIN codes – up to 500 codes is possible)
- ⇒ 2 alarm inputs
- ⇒ 2 outputs (relay supported)
- ⇒ Up to 1000 telephone numbers for CLIP support (400 + 600)
- ⇒ Programming by USB SIM Key editor
- ⇒ Programming by text commands (SMS commands)
- ⇒ Anti-tampering input

Applications:

- ⇒ Single box, wire free intercom solution
- ⇒ Remote gate opener – Caller ID recognition (CLIP)
- ⇒ Simple alarm support

4 START UP

**VERY
IMPORTANT**

USE A **MICRO SIM CARD** (micro-SIM, see the picture→)
WITH MEMORY FOR UP TO 250 CONTACTS!



⇒ Insert SIM card to be used for ICE-LCD in your personal mobile phone.

IMPORTANT

ERASE THE PIN CODE!

- ⇒ Insert SIM card in ICE-LCD device. The unit must be switched OFF when you insert the SIM!
- ⇒ Connect inputs and outputs to ICE-LCD.
- ⇒ Connect the antenna to antenna connector.
- ⇒ Connect power cable to ICE-LCD device
- ⇒ Connect device to source power supply voltage.
- ⇒ Wait until LED3 display is turned ON (Yellow) and LED1 (Upper Green) starts flashing. This is set in around 30 – 45 seconds.
- ⇒ ICE-LCD unit is now ready to operate.

IMPORTANT

Before sending any SMS commands to ICE-LCD, the device must be in normal operation mode!

NOTE

ICE-LCD device will “beep” in 15s interval until the device is not in normal operation.

5 LED DISPLAY

UPPER GREEN LED (LED1)

- Indicates the level of the GSM signal from 1 to 5 LED flashes (1 is weak signal, 5 is excellent signal)

LOWER GREEN LED (LED2)

- When LED 2 is ON the unit has a problem with a GSM network connection or the GSM part of the unit is out of order. In this case immediately call the service!

YELLOW LED (LED3)

- Short flashing indicates that the GSM module is ON, but it is not yet connected on the GSM network. After connection, Yellow LED is flashing with short pulse ON and a long pulse OFF.

6 CLEAR ALL PROGRAMMED DATA FROM ICE-LCD

This is highly recommended when a SIM card you are going to use for the ICE-LCD is not new and it already has some data stored in the phone book memory.

By sending this SMS to ICE-LCD all programmed parameters and numbers are cleared:

;SDCLR;

After sending SMS you should wait at least 30 second for the command to be executed!

NOTE

By sending this command to the ICE-LCD all programmed data are erased from the SIM card and from the memory inside the ICE-LCD device!

7 CONNECTING DIAGRAM

Before connection the ICE-LCD please take a look at connection diagram.




Figure 1: ICE-LCD Connection diagram

8 PROGRAMMING ICE-LCD

ICE-LCD device supports different types of programming:

- ⇒ You can program ICE-LCD remotely by sending text commands (SMS commands).
- ⇒ You can program ICE-LCD with USB key and SIM manager.
- ⇒ You can program ICE-LCD with direct USB connection, with the use of configuration software running on PC.

NOTE

To receive configuration software for PC please contact your local distributor.

9 THE ICE-LCD PARAMETERS

To support versatile functionality of ICE-LCD different parameters are used. The parameters are divided in logical sections and are described in the following chapters.

9.1 ALARM SUPPORT

Alarm reporting is supported by group of different parameters. First section is used to define the relations needed for alarm to be triggered. The second section is used to report alarm.

9.1.1 ALARM TRIGGERING

Parameters are used to control (filter) the triggering of the alarm inputs.

9.1.1.1 IN parameter

Alarm input can be on only used as normal open (N.O.) triggered with GND. When you need the input feedback information it is possible to receive SMS when input returns from alarm to normal position. To receive the return SMS use IN setting 4.

- ⇒ IN = 0 – Normal Open – triggered with negative voltage (GND)
- ⇒ IN = 4 = IN = 0 + input reset SMS




Figure 2: Input Connection diagram.

9.1.1.2 ID parameter

ID parameter determines time period of the pulse length to trigger the alarm. The pulse time can be from 0,5 seconds to 9999 seconds. The default time is 0,5 seconds when the parameter value is 0.

9.1.1.3 DD parameter

This parameter is used to define the delay between the time that alarm input is triggered and the time that alarm is reported.

9.1.1.4 Table of parameters

Name	Comment
IN1	Mode of operation for input 1
IN2	Mode of operation for input 2
ID1	Input time integration delay on input 1
ID2	Input time integration delay on input 2
DD1	Time delay for alarm reporting on input 1
DD2	Time delay for alarm reporting on input 2

Table 1: IN, ID and DD parameters

Example:

◆ Direct programming on the SIM card

ICE-LCD PROGRAMMING TABLE		
SIM CARD PHONE BOOK		
Name	Number	Description
IN1	0	Alarm activated by connecting to GND
IN2	4	Alarm activated by connecting to GND + RST SMS
ID1	10	Input 1 has to be valid for 10 second to trigger the alarm
ID2	0	Input 2 has to be valid for 0,5 second to trigger the alarm
DD1	0	Reporting of the alarm on input 1 is delayed by 0s
DD2	15	Reporting of the alarm on input 1 is delayed by 15s

Table 2: IN, ID, DD parameters example

◆ Remote programming by SMS

;IN1=0;IN2=4;ID1=10;ID2=0;DD1=0;DD2=15;

9.1.2 REMOTE REPORTING ALARM EVENTS

Parameters used to define the way to report the alarm event.

NOTE ICE-LCD device send SMS messages for reporting alarm events.

9.1.2.1 TN parameter

Telephone numbers for remote alarm reporting are listed as TN parameters. Remote alarm reporting on ICE-LCD is done via SMS messages.

9.1.2.2 LN parameter

This parameter is used to link alarm event from inputs or any other source to the telephone numbers from TN list.

9.1.2.3 LOT parameter

LOT parameter is used to define the time control for voice calls. The start of voice connection starts the LOT timer. If the voice connection is still ON when the LOT timer expires ICE-LCD disconnects voice connection.

9.1.2.4 Table of parameters

Name	Comment
TN1	1 st telephone number
TN2	2 nd telephone number
TN3	3 rd telephone number
TN4	4 th telephone number
TN5	5 th telephone number
LN1	Input & telephone No. linking for 1 st alarm input (TN1 – TN5)
LN2	Input & telephone No. linking for 2 nd alarm input (TN1 – TN5)
LN3	Periodic test SMS. No. linking (TN1 – TN5)
LN4	SIM card refill. No. linking (TN1 – TN5)
LN5	NAC list. No. linking (TN1 – TN5) (see note)
LN6	Log status. No. linking (TN1 – TN5)
LOT	Time out for GSM connection.

Table 3: Remote alarm reporting parameters

Note:

When telephone number (calling or messaging ICE-LCD) is not on the CLIP list, not acknowledge event occurs (NAC). The telephone number responsible for this event can be send to TN user for notification.

Example:

◆ **Direct programming on the SIM card**

ICE-LCD PROGRAMMING TABLE		
SIM CARD PHONE BOOK		
Name	Number	Description
TN1	042376678	1st telephone number
LN1	13	Input 1 reports alarm to TN1 & TN3
LN2	1234	Input 2 reports alarm to TN1 & TN2 & TN3 & TN4
LN5	1	NAC event sent to TN1
LOT	60	Voice connection stay valid for max of 60s, after this time Voice connection breaks

Table 4: Remote alarm reporting example

◆ **Remote programming by SMS**

;TN1=042376678;LN1=13;LN2=1234;LN5=1;LOT=60;

9.1.3 CONTROLLING OUTPUTS WITH DTMF

ICE-LCD can control the outputs with the use of DTMF. This is very useful function in the intercom application.

To control the outputs the user must press the combination of 2 digits. First digit is used to select the output (1 to 2), the second digit is used to activate (1) or deactivate (0) the output. There is a special case when the user can select for first digit (output selection) number 0. In this case all outputs control by the same time.

Combination must be pressed in 2s interval, and must be 3s apart to be valid.

NOTE

ICE-LCD must be in voice connection to support DTMF output control!

Example:

DTMF combination	Description
00	Deactivate ALL outputs
01	Activate ALL outputs
11	Activate output 1
10	Deactivate output 1 (if in latching mode)
21	Activate output 1
20	Deactivate output 2 (if in latching mode)

Table 5: DTMF control example

9.2 OUTPUT MANAGEMENT

ICE-LCD supports the possibility to report alarms from inputs and any other events locally via 4 outputs. The behavior is defined using next parameters

9.2.1 OS parameter

ICE-LCD device has 2 dedicated relay supported outputs. Outputs can be configured to different behavior:

- ⇒ OS = 0 – Disabled
- ⇒ OS = 1 – Bi-stable toggle mode
- ⇒ OS = xxx – Mono-stable pulse mode (duration in seconds)

Typical connection for the output:

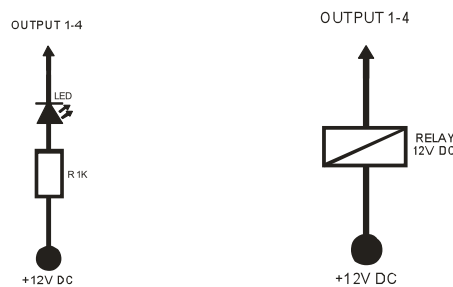


Figure 3: Output Connection diagram

9.2.2 OD parameter

OD parameter is used to link the alarm event directly to output.

9.2.3 OP1, OP2 parameters

Parameters are used to invert the polarity of the outputs.

- ⇒ 0 – normal
- ⇒ 1 – inverted

9.2.4 Table of parameters

Name	Comment
OS1	Mode of operation for output 1
OS2	Mode of operation for output 2
OD1	Input 1 direct link to outputs
OD2	Input 2 direct link to outputs
OD3	NAC direct link to outputs
OP1	Invert control for output 1
OP2	Invert control for output 2

Table 6: Output management parameters

Example:

◆ Direct programming on the SIM card

ICE-LCD PROGRAMMING TABLE		
SIM CARD PHONE BOOK		
Name	Number	Description
OS1	1	Bistable toggle mode
OS2	14	Monostable pulse mode (14s pulse)
OD1	1	Input 1 activates output 1
OD2	2	Input 2 activates output 2
OP1	1	Output 1 inverted

Table 7: Output management parameters example

◆ Remote programming by SMS

;OS1=1;OS2=14;OD1=1;OD2=2;OP1=1;

9.3 SECURITY LEVEL - SL

SL parameter from 0 to 5 defines which telephone number stored in the phone book from TN1 – TN5 can enter into programming and remote control of the ICE-LCD (dialing the ICE-LCD phone number or sending the SMS).

NOTE

When the SL level is 0, an access to the ICE-LCD is possible from any phone!

IMPORTANT

Before any SL number is programmed the ICE-LCD can accept ALL CALLS. Remote SMS programming and remote controlling is possible from any phone!

Name / value	Comment
SL = 0	All calls and SMS are accepted
SL = 1	Only number stored under parameter TN1 has access to unit
SL = 2	Numbers stored under parameters TN1 to TN2 have access to unit
SL = 3	Numbers stored under parameters TN1 to TN3 have access to unit
SL = 4	Numbers stored under parameters TN1 to TN4 have access to unit
SL = 5	Numbers stored under parameters TN1 to TN5 have access to unit

Table 8: SL parameter

Example:

◆ Direct programming on the SIM card

ICE-LCD PROGRAMMING TABLE		
SIM CARD PHONE BOOK		
Name	Number	Description
SL	3	Numbers stored under parameters TN1 to TN3 have access to unit

Table 9: SL parameter example

◆ Remote programming by SMS

;SL=3;

9.4 PREPAID CARD CREDIT AND VALIDITY INFORMATION

ICE-LCD can be used with prepaid SIM cards and its limitations. To be able to overcome this limitation of the prepaid SIM cards, ICE-LCD offers the possibility of automatic checking mechanism for credit and time expiration.

NOTE

ICE-LCD automatically sends warning SMS when the credit reaches low level defined by LCV parameter or SIM card validity is near to expiration.

NOTE

For support of different GSM providers contact support.

9.4.1 Programming prepaid card credit and validity string

To be able to support credit and time validity checking different parameters are used.

9.4.1.1 LCV and SCV parameter

LCV is used to set the limit for low credit event. If the credit on prepaid SIM cards falls below this limit SMS is send.

SCV the period of valid operating time varies with different GSM network providers. The value can be programmed from 1 to 360 days. The default value does not presume any kind of expiry warning.

For example in Slovenia SCV are 90 and in Italy 360 days

9.4.1.2 CC1, CC2 and CC3 parameters

Number used to check low credit value. They are provided from the GSM providers.

- ⇒ CC1 - This method can be used by any GSM provider that supports Unstructured Supplementary Service Data
- ⇒ CC2 - This method is dedicated to Italian TIM mobile provider
- ⇒ CC3 - This method is dedicated to Italian Vodafone mobile provider

9.4.1.3 CREF, CTIM, CVODA parameters

Parameters are used to find the credit value of the prepaid SIM card. Strings under these parameters are used to parse the replay message from the GSM provider.

- ⇒ CREF - Pars string for the replays received from CC1 number
- ⇒ CVODA - Pars string for the replays received from CC2 number
- ⇒ CTIM - Pars string for the replays received from CC3 number

9.4.1.4 Table of parameters

Name	Comment
LCV	Low credit value, bottom limit for low credit event.
SCV	Sim card validity time (in days)
CC1	Credit number for credit check universally used
CC2	Credit number for credit check dedicated for Italian TIM mobile provider
CC3	Credit number for credit check dedicated for Italian Vodafone mobile provider
CREF	String for parsing replay message from CC1 number
CVODA	String for parsing replay message from CC2 number
CTIM	String for parsing replay message from CC3 number

Table 10: Prepaid card validity parameters

Example:

◆ Direct programming on the SIM card

ICE-LCD PROGRAMMING TABLE		
SIM CARD PHONE BOOK		
Name	Number	Description
CC1	*448#	Si.mobil
CC2	4916	TIM Italy
CC3	404	Vodafone Italy
LCV	4	Low credit message will be send bellow 4

Table 11: Prepaid card validity parameters example

◆ Remote programming by SMS

;CC1=*448#;CC2=4916;CC3=404;LCV=4;

9.5 SET-UP PARAMETERS

Different parameters are used to support versatile functionality of ICE-LCD.

9.5.1 HTN parameter

Hidden telephone number is a parameter used in order to conceal the telephone number of the ICE-LCD device. The default value is set to “1” which means that the number is displayed.

9.5.2 UDC parameter

Parameter is used to synchronise ICE-LCD clock to GSM network clock. User must enter here the number of the ICE-LCD SIM card (Telephone number of ICE-LCD device).

9.5.3 RAN parameter

Parameter is used to provide support for auto-answer options for ICE-LCD device. The number defines the numbers of rings needed for ICE-LCD device to answer the incoming call. The incoming number must be on the TN list for ICE-LCD device to answer.

9.5.4 TST parameter

A test SMS is sent periodically. ICE-LCD can send the test message in the interval ranging from 1 hour to 240 hours.

Example:

To send test SMS TST value is set to 12, the numbers linked to “LN5” receive a test message every 12 hours.

9.5.5 MNF parameter

When it is necessary to fix the GSM network to one provider the user can use the MNF parameter. The MNF parameter switches automatic network searching to manual.

Example:

MCC/MNC code for Simobil is 29340, Mobitel is 29341, TIM is 22201, and Vodafone Italy is 22210.

More information about national MCC/MNC codes can be acquired at:

<http://www.activexperts.com/activsms/networkcodes/>

9.5.6 MIC parameter

MIC parameter enables you to change the sound level on microphone input.

9.5.7 SPK parameter

SPK parameter enables you to change the speaker sound level.

9.5.8 ARST parameter

ARST parameter defines periodic of auto restart time (in hours) of the ICE-LCD device.

9.5.9 MUT parameter

MUT parameter enables you mutate the speaker sound while initiating voice connection.

9.5.10 ADF parameter

Parameter is used to define voice refresh function, to prevent blocking of SIM in some networks.

9.5.11 LNG parameter

LNG parameter switches between the preprogrammed languages:

- ⇒ 0 - English
- ⇒ 1 - Italian
- ⇒ 2 - Slovenian
- ⇒ 3 - Croatian
- ⇒ 4 - Dutch
- ⇒ 6 - Spanish
- ⇒ 7 - German

9.5.12 BUZ parameter

Parameter is used to control buzzer functionality on ICE-LCD. Buzzer is used to audio support some events on ICE-LCD device

9.5.13 Table of parameters

Name	Comment
UDC	Tel. number of ICE-LCD device
RAN	Auto answer ring number
HTN	Hidden telephone number
TST	SMS test time out
MNF	Manual GSM provider selection
MIC	Microphone volume control
SPK	Speaker volume control
ARST	Time out control for automatic system restart
ADF	Auto dial functionality (Call TN1)
LNG	Language selection
BUZ	Buzzer control

Table 12: Set-up parameters.

Example:

◆ Direct programming on the SIM card

ICE-LCD PROGRAMMING TABLE		
SIM CARD PHONE BOOK		
Name	Number	Description
HTN	0	Hidden telephone number of the ICE-LCD device
MNF	29340	Manual fixing of the GSM provider (Simobil)
LNG	1	Switch on Italian language
MIC	2	Microphone volume level
SPK	20	Speaker volume level
TST	24	24 hours periodic test SMS
BUZ	0	Mute buzzer

Table 13: Set-up parameters example.

◆ Remote programming by SMS

;HTN=0;MNF=29340;LNG=1;MIC=2;SPK=20;TST=24; BUZ=0;

9.6 SMS MESSAGES EDITOR

You can write and send a short SMS message for each alarm input. The default message is English, but it is possible to change language with LNG parameter. Each message is built from 3 parts and user can write the first (User Location) and the second (alarm event) part of the message. Unit adds the third part (alarm event description) automatically. Language of the 3rd part may be changed by LNG parameter. The message is stored in the SIM phone book so you should add any number for correct operation.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
#	0	U	S	E	R		L	O	C	A	T	I	O	N	
#	1	I	N	P	U	T		1							
#	2	I	N	P	U	T		2							

NOTE

Message should not be longer than 14 characters! Space is also counted as one character!

9.6.1 Table of parameters

Name	Comment
#0	User location, same for all alarm messages
#1	Input 1, second part of message
#2	Input 2, second part of message

Table 14: Message parameters.

Example:

◆ Direct programming on the SIM card

ICE-LCD PROGRAMMING TABLE		
SIM CARD PHONE BOOK		
Name	Number	Description
#0House	1	Location definition
#1Kitchen	1	Alarm input is from the kitchen

Table 15: Message parameters example.

◆ Remote programming by SMS

;<#0HOUSE=1;#1KITCHEN=1;

9.7 INTERCOM

Intercom functionality is supported by a set of parameters, used to tweak the functionality to each user needs.

For each keypad entry ICE-LCD incorporates a group of parameters. ICE-LCD support up to 200 call groups.

9.7.1 KPAX and KPB1 parameters

Parameters are the call numbers for intercom application.

9.7.2 KPTx parameter

Parameter defines the ring time time-out (is seconds). KPTx timer is started when the dialed telephone starts to ring. If the KPTx timer expires before the GSM voice connection is established then ICE-LCD device calls the next number (KPBx).

9.7.3 KPOx parameter

Parameter is used to define the output for the selected call group.

9.7.4 KPNx parameter

Parameter is used to redefine the keypad dial number for each call group.

9.7.5 Table of parameters

Name	Comment
KPA1	Call group 1, Telephone number 1.
KPB1	Call group 1, Telephone number 2.
KPN1	Call group 1, keypad dial number .
KPT1	Call group 1, time out control for voice connection.
KPO1	Call group 1, output 1 or output 2
	.
	.
	.
	.
KPA200	Call group 200, Telephone number 1.
KPB200	Call group 200, Telephone number 2.
KPN200	Call group 200, time out control for voice connection.
KPT200	Call group 200, time out control for voice connection.
KPO200	Call group 200, output 1 or output 2

Table 16: Intercom parameters.

Example:

◆ **Direct programming on the SIM card**

ICE-LCD PROGRAMMING TABLE		
SIM CARD PHONE BOOK		
Name	Number	Description
KPA1	040713470	Call group 1, Telephone number 1.
KPB1	+38643364850	Call group 1, Telephone number 2.
KPT1	30	Call group 1, time out control for voice connection.
KPO1	1	Call group 1, output 1

Table 17: Intercom parameters example.

◆ **Remote programming by SMS**

;KPA1=040713470;KPB1=+38643364850;KPT1=30;KPO1=1;

NOTE

All KPAX and KPBx numbers are at the same time used as intercom numbers and as CLIP numbers.

Example: The users under parameters KPA1 and KPB1 can call ICE-LCD device and activate the output defined by the KPO1 parameter.

9.8 TRADE BUTTON (OPTION)

Trade button support is a user option to add an additional button to provide direct (button pressed), time supported, activating of the selected output. With the use of the TBZS and TBZE the user can define the time interval when the trade button is active.

IMPORTANT

Trade button function will operate correctly ONLY if UDC parameter is set.

9.8.1 TBE parameter

Parameter is used to enable the trade button functionality and to define the input where the button is connected.

9.8.2 TBZS

Parameter is used to define the start point of the active time interval.

9.8.3 TBZE

Parameter is used to define the end point of the active time interval.

9.8.4 Table of parameters

Name	Comment
TBE	Trade button enable/define input.
TBZS	Trade button interval start.
TBZE	Trade button interval end.

Table 18: Trade button parameters.

Example:

◆ Direct programming on the SIM card

ICE-LCD PROGRAMMING TABLE		
SIM CARD PHONE BOOK		
Name	Number	Description
TBE	1	Enable Trade button in input 1
TBZS	6	Trade button interval, start at 6.
TBZE	15	Trade button interval, ends at 15.

Table 19: Trade button example.

◆ Remote programming by SMS

; TBE =1; TBZS =6; TBZE =15;

9.9 DIRECT ACCESS BY ENTERING PIN CODE

The user may control the predefined outputs by entering the PIN codes. PIN code from 1 to 250 (PIN1 to PIN250) will activate Output 1, pin codes from 251 to 500 (PIN251 to PIN500) will activate Output 2.

9.9.1 PIN1 to PIN500

PINx parameters are the Access entry codes for controlling the outputs (output 1 or output 2).

9.9.2 Table of parameters

Name	Comment
PIN1	Access entry code 1.
PIN2	Access entry code 2.
PIN3	Access entry code 3.
.	.
.	.
.	.
PIN498	Access entry code 498.
PIN499	Access entry code 499.
PIN500	Access entry code 500.

Table 20: Entering PIN code parameters.

Example:

◆ Direct programming on the SIM card

ICE-LCD PROGRAMMING TABLE		
SIM CARD PHONE BOOK		
Name	Number	Description
PIN1	3369	Access entry code 1.
PIN455	1234	Access entry code 455.

Table 21: Entering PIN code example.

◆ Remote programming by SMS

; PIN1 =3369; PIN455 =1234;

NOTE

PINx codes must be 4 digits long, and must start with number greater or equal 1.

9.10 CALLER ID RECOGNITION (CLIP), CALLER-IN FUNCTION

CLIP is used to provide the “free of charge” options to control the outputs.

By calling the ICE-LCD device from one of the programmed telephone numbers, triggering the Outputs is possible.

All KPAX and KPBx telephone numbers are at the same time used as intercom numbers and as Caller ID numbers.

Example: The users stored under parameters KPA1 and KPB1 can call SOLO device and activate the output defined by the KPO1 parameter.

Additional 600 Caller ID numbers can be programmed. So max. 1000 Access entry cdes can be programmed.

9.10.1 CLPEN parameter

Parameter used to enable CLIP functionality.

9.10.2 CLPOU parameter

Parameter used to choose which output will be controlled by the CLIP functionality.

9.10.3 CLPI parameter

This parameter, if set, is a precondition for CLIP function to control the output.

9.10.4 CLP1 ... CLP600 parameter

Set of telephone number, which can control the output. The number not on CLP list is not able to control the output using clip functionality.

9.10.5 Table of parameters

Name	Comment
CLPEN	Enable CLIP functionality
CLPOU	Control output pin when CLIP event
CLPI	CLIP input activation condition
CLP1	CLIP number 1
.	.
.	.
.	.
CLP600	CLIP number 600

Table 22: CLIP parameters.

Example:

◆ **Direct programming on the SIM card**

ICE-LCD PROGRAMMING TABLE		
SIM CARD PHONE BOOK		
Name	Number	Description
CLPEN	1	Enable CLIP functionality
CLPOU	2	CLIP control output 2
CLPI	0	No input activation condition
CLP1	040414414	CLIP number 1
CLP2	042340880	CLIP number 2

Table 23: CLIP parameters example.

◆ **Remote programming by SMS**

;CLPEN=1;CLPOU=2;CLPI=0;CLP1=040414414;CLP2=042340880;

9.11 EVENT LOGGING

ICE-LCD device support logging of specific events. ICE-LCD logs CLIP event and alarm input events.

Log event consist of event type, time and telephone number or input number.

Up to 20.000 Log events can be stored.

9.11.1 LOGN parameter

Parameter is used for defining the number of events printed out on PLOG request.

9.11.2 LOGI parameter

Parameter is used to define the media used for logging of events on ICE-LCD. User can select between nonvolatile memory on ICE-LCD or select USB to transfer events directly via USB to PC.

9.11.3 ALC parameter

Parameter is used to control behavior when log on ICE-LCD is full. User can select between auto log clear or manual clear of log.

9.11.4 Table of parameters

Name	Comment
LOGN	Number of log events for printing out
LOGI	Log interface
ALC	Automatic log clear

Table 24: LOG parameters.

Example:

◆ Direct programming on the SIM card

ICE-LCD PROGRAMMING TABLE		
SIM CARD PHONE BOOK		
Name	Number	Description
LOGN	5	5 log events will be printed out on PLOG command
LOGI	0	Nonvolatile memory on ICE-LCD
ALC	1	Log is auto cleared when full

Table 25: LOG parameters example.

◆ Remote programming by SMS

;LOGN=5;LOGI=0;ALC=1;

9.12 SPECIAL SMS COMMANDS

These commands can only be issued only over SMS message, and are used to control some special functions of ICE-LCD device.

9.12.1 ORC command

Command is used to control outputs directly via SMS message

9.12.2 SDCLR command

To clear all data on the device SDCLR command is used.

9.12.3 LCRL command

Command clears log on ICE-LCD device.

9.12.4 CLPCLR command

Command is used to delete all Caller Id (CLP) numbers.

9.12.5 MRES command

Command is used to manually restart GSM module on ICE-LCD device.

9.12.6 SSRES command

Command is used to manually restart ICE-LCD device.

9.12.7 Table of parameters

Name	Comment
ORC1	Control of output 1
ORC2	Control of output 2
SDCLR	Delete all SIM content
LCRL	Delete log on ICE-LCD device
MRES	Manual reset of GSM module
SSRES	Manual reset of ICE-LCD device

Table 26: SMS commands.

Example:

◆ Remote programming by SMS

SMS commad	Description
;ORC1=1;	Activate output 1
;ORC2=0;	Deactivate output 2
;SDCLR;	Clear all data on SIM
;LCLR;	Delete log on ICE-LCD device
;MRES;	Manual reset of GSM module
;SSRES;	Manual reset of ICE-LCD device

Table 27: SMS commands example.

10 PRINT-OUT OF THE PARAMETERS

The authorized user can check the settings of ALL parameters on the ICE-LCD.

10.1 RECEIVE ALL PARAMETERS (PALL)

By sending this command to ICE-LCD you receive SMS messages with all parameters that are currently programmed in the unit:

;PALL;

10.2 CHECK SW REVISION (PSW)

By sending this command to ICE-LCD you receive SMS messages with current SW version running on ICE-LCD device:

;PSW;

10.3 CHECK SIGNAL QUALITY (PSQ)

By sending this command to ICE-LCD you receive SMS messages with signal quality ICE-LCD device is connected to network:

;PSQ;

10.4 RECEIVE TELEPHONE NUMBERS (PTN)

By sending this command to ICE-LCD you receive SMS message with all currently programmed telephone numbers (TN1 – TN5):

;PTN;

10.5 RECEIVE LINKS (PLN)

By sending this command to ICE-LCD you receive SMS message with all currently programmed links (LN1 – LN6):

;PLN;

10.6 RECEIVE INPUT PARAMETERS (PIN)

By sending this command to ICE-LCD you receive SMS message with all currently programmed Input parameters (IN1 – IN4):

;PIN;

10.7 RECEIVE INPUT FILTER VALUE (PID)

By sending this command to ICE-LCD you receive SMS message with all currently programmed Input filters (ID1 – ID2):

;PID;

10.8 RECEIVE OUTPUT FILTER VALUE (POD)

By sending this command to ICE-LCD you receive SMS message with all currently programmed direct output links (OD1 – OD3):

;POD;

10.9 RECEIVE DELAY BEFORE DIAL VALUE (PDD)

By sending this command to ICE-LCD you receive SMS message with all currently programmed Input filters (DD1 – DD2):

;PDD;

10.10 RECEIVE ACCESS TELEPHONE NUMBERS (PSL)

By sending this command to ICE-LCD you receive SMS message with programmed SL level:

;PSL;

10.11 RECEIVE OUTPUT PARAMETERS (POS)

By sending this command to ICE-LCD you receive SMS message with all currently programmed Outputs parameters (OS1 – OS2):

;POS;

10.12 RECEIVE ALL PROGRAMMED SMS MESSAGES (P#)

By sending this command to ICE-LCD you receive SMS message with all currently programmed alarm SMS messages (#0 - #4):

;P#;

10.13 RECEIVE SET UP PARAMETERS VALUE (PPA)

By sending this command to ICE-LCD you receive SMS message with all currently programmed Setup parameters (TST, MNF...):

;PPA;

10.14 RECEIVE CREDIT PARS PARAMETERS (PCREF)

By sending this command to ICE-LCD you receive SMS message with all currently programmed credit parse parameters (CREF, CVODA...):

;PCREF;

10.15 RECEIVE ALL CLIP PARAMETERS (PCLP)

By sending this command to ICE-LCD you receive SMS message with all currently programmed CLIP functionality related parameters (CLPEN, CLPOU, CLPI, CLPx):

;PCLP;

NOTE

User can use ;PCLP=x,y; to limit the number of CLIP numbers to be printed.
 x = start number
 y = end number
 Example
 ;PCLP=1,10; Prints first 10 CLIP numbers

10.16 RECEIVE INTERCOM CALL GROUPS PARAMATERS

By sending this command to ICE-LCD you receive SMS message with all currently programmed button 1 group parameters (KPAX, KPBx, KPNx, KP0x, KPTx):

;PKP;

NOTE

User can use ;PKP=x,y; to limit the number of call groups to be printed.
 x = start group
 y = end group
 Example
 ;Pkp=1, 10; Prints first 10 call groups settings

10.17 RECEIVE TRADE BUTTON PARAMETERS

By sending this command to ICE-LCD you receive SMS message with all currently programmed trade button settings:

;PTB;

10.18 STATE OF THE CREDIT FOR THE PREPAID CARD

By sending this command to ICE-LCD you receive SMS message with Credit amount on your prepaid SIM card:

;PCCX;

Where X is the number of programmed prepaid card provider.

10.19 STATE OF THE OUTPUTS (PORC)

By sending this command to ICE-LCD you receive SMS message with current outputs state.

;PORC;

10.20 MANUAL GSM MODULE RETARD (MRES)

By sending this command to ICE-LCD shuts down GSM module and after a few second it switches the power of the GSM module ON again. The unit reboots all parameters from the SIM card.

;MRES;

10.21 RECEIVE STATUS OF INPUTS (INS)

By sending this command to ICE-LCD you receive SMS message with current input state.

;INS;

10.22 RECEIVE ICE-LCD LOG

By sending this command to ICE-LCD you receive SMS message with log on ICE-LCD device.

;PLOG;

11 CHANGING PARAMETERS USING THE SMS COMMANDS

All programming parameters for ICE-LCD can also be sent by SMS command. Each SMS command should start and stop with semicolon. If the confirmation SMS is needed, put “+” at the beginning of the command SMS.

The first SMS is SMS with telephone numbers (TN1 – TN4). If you would like to check which telephone numbers are programmed in ICE-LCD please use the following command:

;PTN;

Return SMS is (example):

;TN1=0;TN2=0;

If you would like to enter telephone numbers in to ICE-LCD you can use the following example:

;TN1=040713470;TN2=+38643364850;

If you would like to receive confirmation SMS write “+” before SMS command:

;+TN1=040713470;TN2=+38643364850;

Return SMS from ICE-LCD is:

;TN1=040713470;TN2=+38643364850;

NOTE

You can use the same programming procedure for all parameters.

It is also possible to change different parameters with one SMS. Consider that the SMS message should not be longer than **160 characters** (included space characters).

If you would like to change the following parameters **TN1, IN1, IN2, OS1, OS2; ID1, LN1 and CRE** and would like to receive confirmation SMS, try next example:

;+TN1=+38640713470;IN1=1;IN2=1;OS1=15;OS2=1;ID1=120;LN1=1;

Send SMS message to ICE-LCD telephone number and in a few seconds you receive SMS message from ICE-LCD. The sentence of the SMS must be the same as the one you have sent to ICE-LCD before.

12 DEFAULT SETTINGS ON ICE-LCD

ICE-LCD PROGRAMMING TABLE		
Name	Default Value	Short Description
TN1	Empty	Telephone number 1
TN2	Empty	Telephone number 1
TN3	Empty	Telephone number 2
TN4	Empty	Telephone number 3
TN5	Empty	Telephone number 4
IN1	0	Input 1 control
IN2	0	Input 2 control
OS1	5	Output 1 mode
OS2	5	Output 2 mode
OD1	1	Input 1 direct output link
OD2	0	Input 2 direct output link
OD5	0	NAC direct output link
LN1	Empty	Input 1, link to tel. numbers
LN2	1	Input 2, link to tel. numbers
LN3	Empty	Periodic SMS text, link to tel. numbers
LN4	Empty	SIM card refill, link to tel. numbers
LN5	Empty	NAC, link to tel. numbers
LN6	Empty	LOG full, link to tel. numbers
ID1	1	Input 1 delay filter on input
ID2	120	Input 2 delay filter on input
DD1	0	Input 1 delay before dialing
DD2	0	Input 2 delay before dialing
SL	0	Security level
#0	“User Location”	SMS main head text
#1	“Input1”	SMS input 1 text
#2	“Input2”	SMS input 2 text
CC1	Empty	Check credit Num 1
CC2	Empty	Check credit, TIM Italy
CC3	Empty	Check credit, Vodafone Italy
UDC	Empty	Tel. number of ICE-LCD device
HTN	1	Hidden telephone number
RAN	0	Auto answer ring number
SCV	0	SIM card time validity
TST	24	Periodic test SMS timeout
MNF	0	Network connection type
MIC	15	Microphone volume setting (0 - 40)
MUT	0	Mute functionality
SPK	10	Speaker volume setting (0 - 20)
LCV	4	Low credit value
LNG	0	Language selection

ICE-LCD PROGRAMMING TABLE		
Name	Default Value	Short Description
LOT	90	Connection time out value
LOGN	5	Number of log events for printing out
LOGI	0	Log interface
ALC	1	Automatic log clear
ADF	90	Auto dial functionality (Call TN1)
ARST	0	Automatic reset timeout
CREF	“EUR”	Parse text(contact support)
CTIM	“EURO”	Parse text(contact support)
CVODA	“DISPON. E.”	Parse text(contact support)
OP1	1	Output invert 1
OP2	1	Output invert 2
BUZ	1	Buzzer control
SPO	1	SIM card starting position
CLPEN	1	Enable CLIP functionality
CLPOU	1	Control output pin when CLIP event
CLPI	0	CLIP input activation condition
CLP1	Empty	CLIP number 1
.	.	
.	.	
.	.	
CLP600	Empty	CLIP number 600
KPA1	Empty	Call group 1, Telephone number 1.
KPB1	Empty	Call group 1, Telephone number 2.
KPN1	1	Call group 1, keypad dial number .
KPT1	25	Call group 1, time out control for voice connection.
KPO1	1	Call group 1, output .
.	.	
.	.	
.	.	
KPA200	Empty	Call group 200, Telephone number 1.
KPB200	Empty	Call group 200, Telephone number 2.
KPN200	100	Call group 200, keypad dial number .
KPT200	25	Call group 200, time out control for voice connection.
KPO200	1	Call group 200, output .
TBE	0	Trade button enable/disable.
TBZS	0	Trade button zone interval start.
TBZE	0	Trade button zone interval end.

Table 28: ICE-LCD default settings.

13 PARAMETERS PRINT-OUT COMMANDS

ICE-LCD PROGRAMMING TABLE	
Name	Short Description
PALL	Prints all parameters available on ICE-LCD.
PSW	Prints SW version of ICE-LCD.
PSQ	Prints GSM network signal quality of ICE-LCD.
PTN	Prints TNx numbers.
PLN	Prints LNx links.
PIN	Prints INx parameters.
PID	Prints IDx parameters.
POD	Prints ODx parameters.
PDD	Prints DDx parameters
PSL	Prints SL parameter.
POS	Prints OSx parameters.
P#	Prints #x parameters.
PPA	Prints various setup parameters.
PCLP	Prints CLIP parameters.
PLOG	Prints log of the ICE-LCD.
PCREF	Prints credit pars parameters.
PCN	Prints credit request numbers.
PCC1	Prints credit for ICE-LCD (universal request).
PCC2	Prints credit for ICE-LCD. (TIM Italy).
PCC3	Prints credit for ICE-LCD. (VODAFONE Italy).
PWG	Prints Wiegand parameters.
INS	Prints status of the inputs.
PORC	Prints (controls) the status of outputs.
PKP	Prints call groups parameters.
PPIN	Prints PINx parameters.
PTB	Prints trade button parameters.
PERR	Special debug command, contact supplier for details.

Table 29: ICE-LCD parameters print out commands.

14 TECHNICAL SPECIFICATIONS

Description	Value
Power Supply	14,7 - 24V AC/DC (1,2 – 1,5A)
Current consumption - peak	2A
Current consumption - transmitting mode	250mA
Current consumption - idle mode	80mA
Quad band GSM module	850/900/1800/1900 MHz
PCB dimensions	106 × 89 mm
Unit dimensions	290 × 113 × 56 mm
External Antenna SMA	1
Weight approx..	1500 gr.
Alarm inputs	2
Alarm outputs (relay)	2
Wiegand 26 Output	Yes
12V DC Aux. Power Supply output	Yes (500 mA max)
14,7/24V AC/DC Power Supply input	Yes
Anti-tamper protection	optional