



NORTH SHORE
COMMERCIAL DOOR .COM

3

Bottom Weather Seal

Tools: Hammer, Tape Measure, Saw Horses

NOTE: If a bottom weather seal is supplied, complete this step.


NOTE: Refer to Door Section Identification / Parts Breakdown.

Place the bottom section face down on a couple of sawhorses or flat clean/ smooth surface. Align the bottom weather seal with the flap pointing towards the outside surface of the bottom section.

Starting at one end of the door, measure inward 1" and attach the bottom weather seal to the bottom of the bottom section with 3/4" long galvanized roofing nails (not supplied). Now stretch the bottom weather seal slightly and nail the rest of the bottom weather seal to the bottom of the bottom section every 6".

Once the bottom weather seal is fastened cut off any extra material so that the bottom weather seal is even with both ends of the bottom section.

NOTE: Verify bottom weather seal is aligned with bottom section. If there is more than 1/2" excess weather seal on either side, trim weather seal even with bottom section.

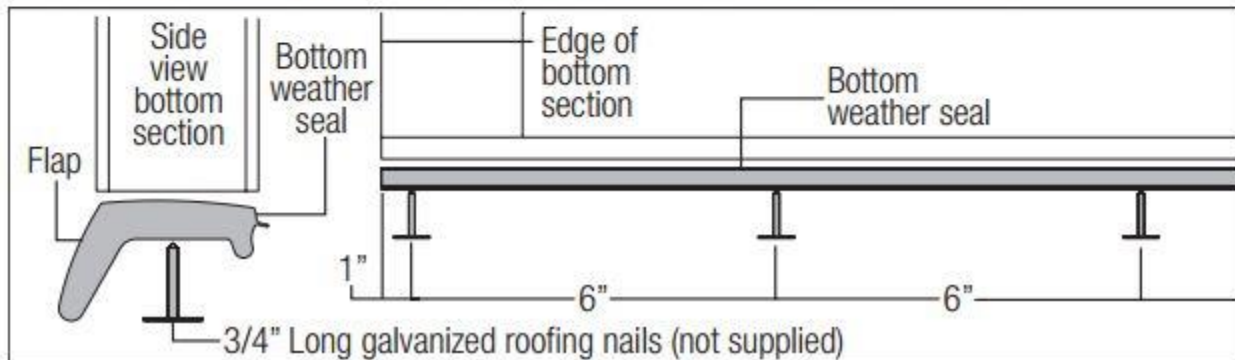

North Shore Residential Door
162 Edgewood Street
Elyria, Ohio 44035

Phone 800-783-6112
Fax 440-365-3514

If you have any questions regarding any of our product offerings, call us at 800-783-6112 between 8:00 AM and 4:30 PM EST or send an email to our sales team at support@northshorecommercialdoor.com