


Connecting the KPR2000 to LiftMaster Access Control Systems **EL2000SS or EL25**

Application

Access to an entry or exit point monitored and controlled by a EL2000SS or EL25 Access Control System.

NOTE: Wiegand module part number WOMODKT is required to connect the KPR2000 to an EL2000SS or EL25 Access Control System.

Wiring

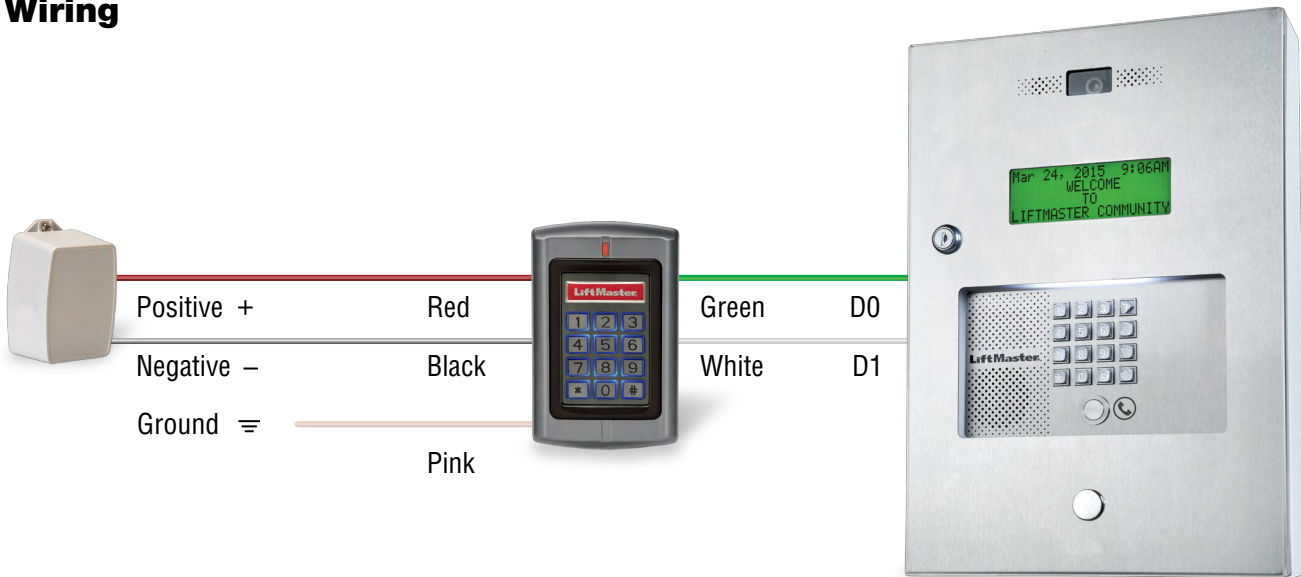

Configuration

KPR2000: No configuration required.

EL2000SS and EL25: A door number must be assigned to the KPR2000. Use the Versa XS 4.0 software to assign a door number.

Add a Card (default is 26-Bit Wiegand Card)

There are two methods to add a card to the KPR2000, use the “Manager Add” card or the keypad:

“Manager Add” Card

1. Swipe “Manager Add” card, the KPR2000 will beep.
2. Swipe new Wiegand card.
3. Swipe “Dealer Add” card, the KPR2000 will beep.

Keypad

Default Master PIN Code is 888888.

1. Press * 888888 #.
2. Press 1.
3. Swipe new Wiegand card.
4. Press *.